
English Guide
Part Names

- The number shown in each ▶ is the page number where the part's function and/or use are explained in Japanese.

Front view

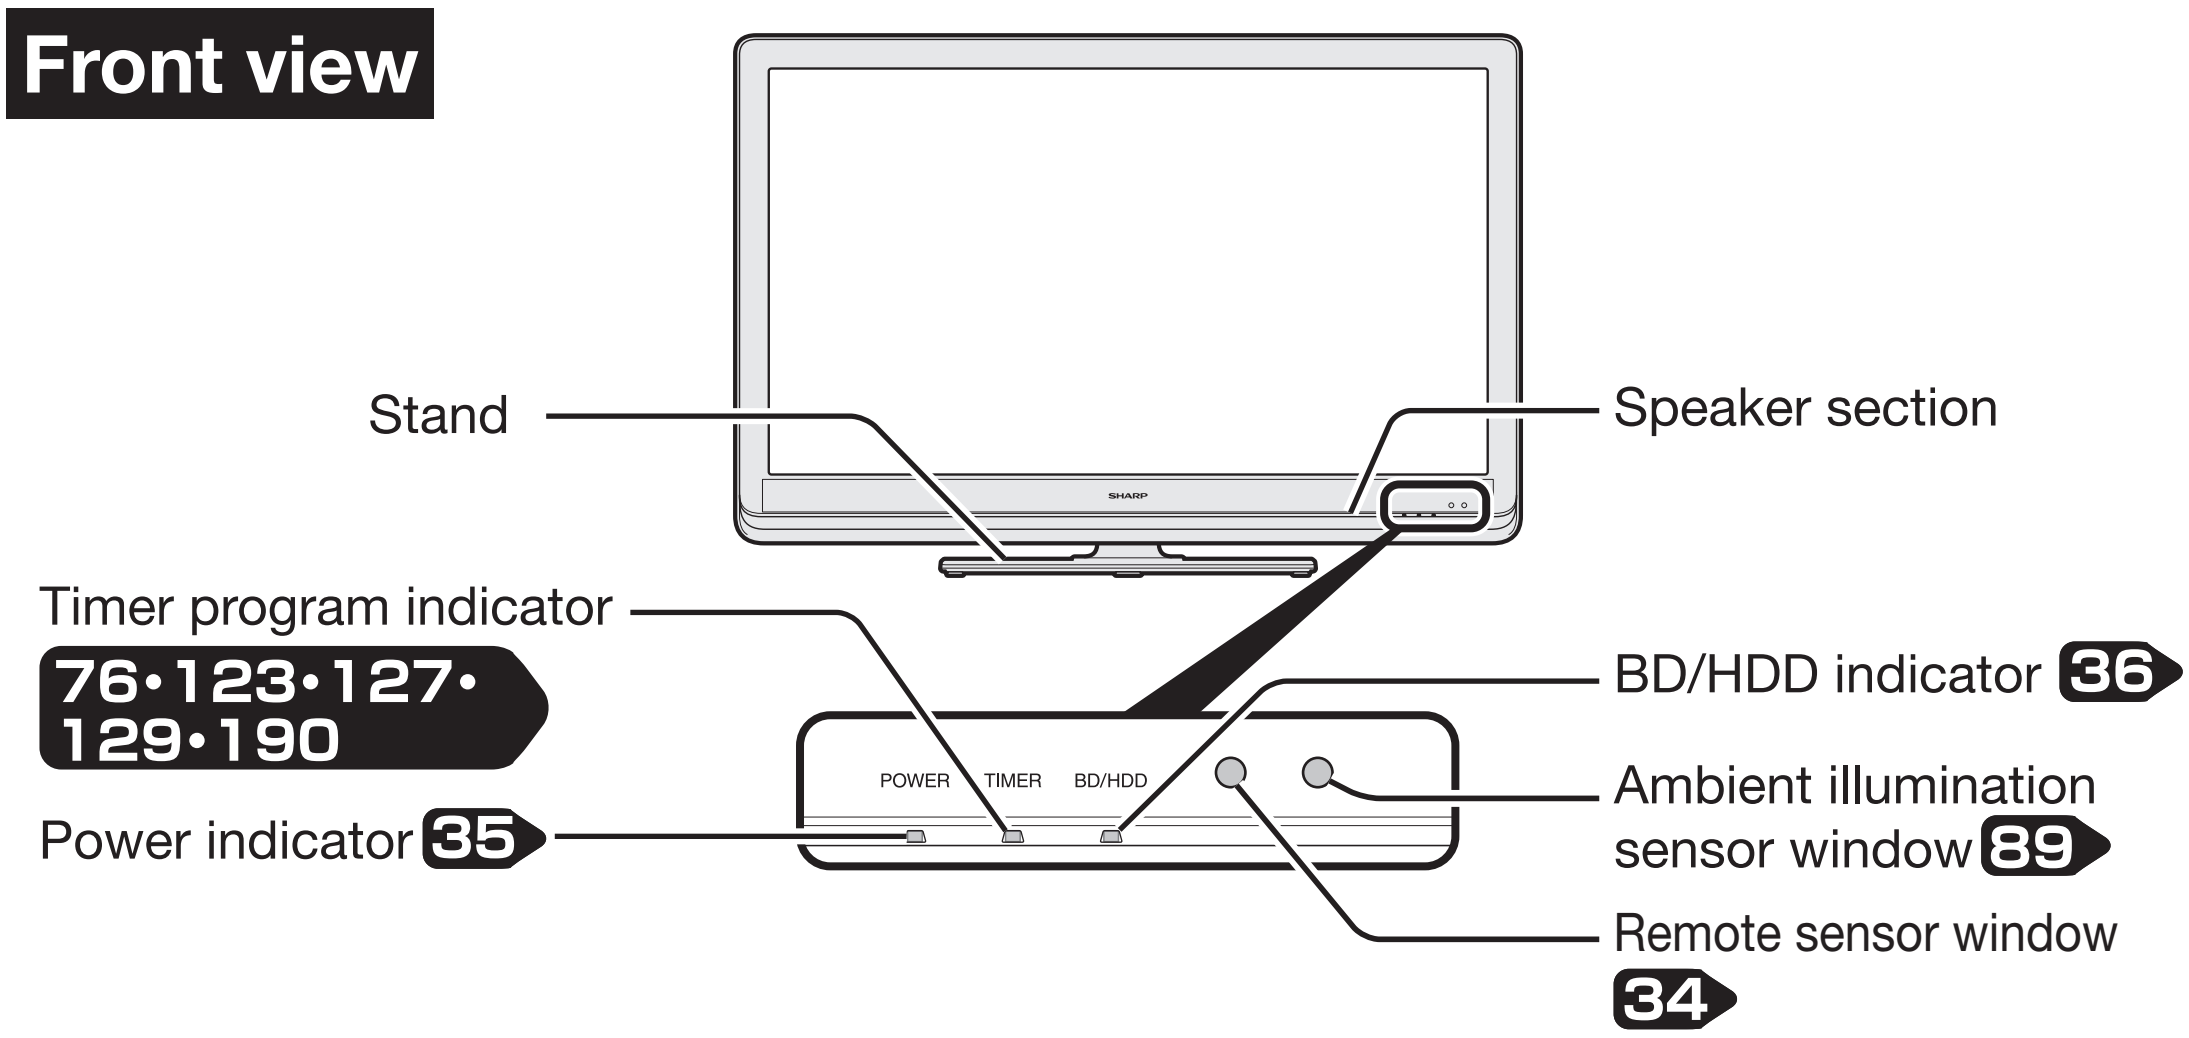


Adjusting the LCD panel angle


- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Control panel

Right side view

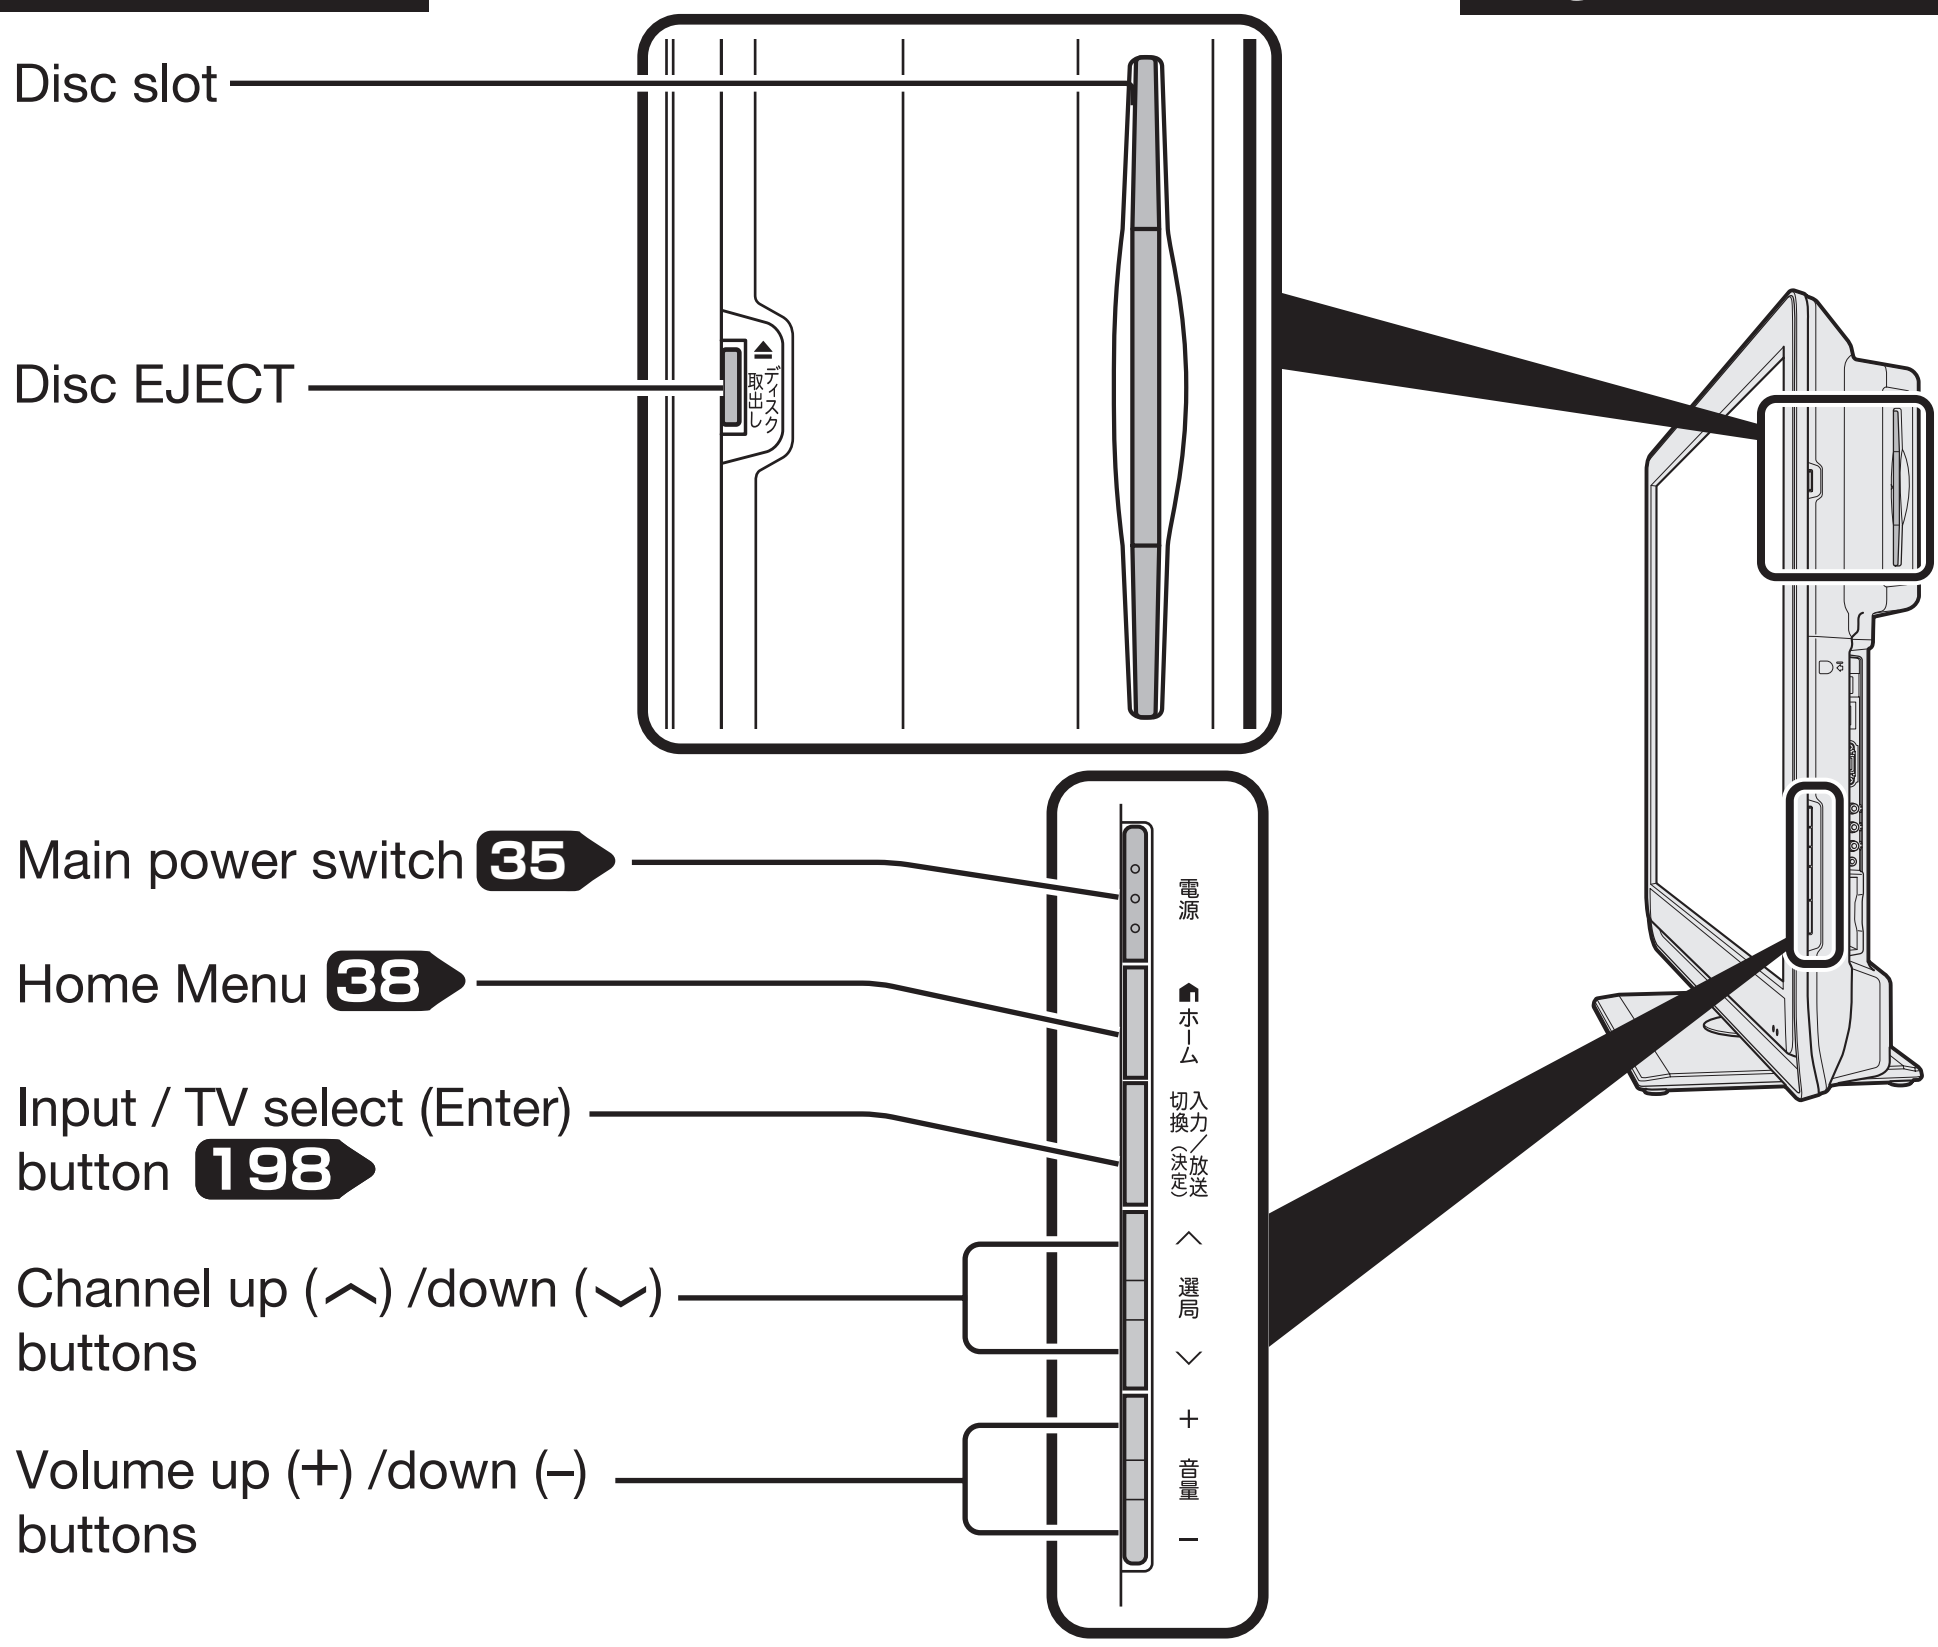

Back view

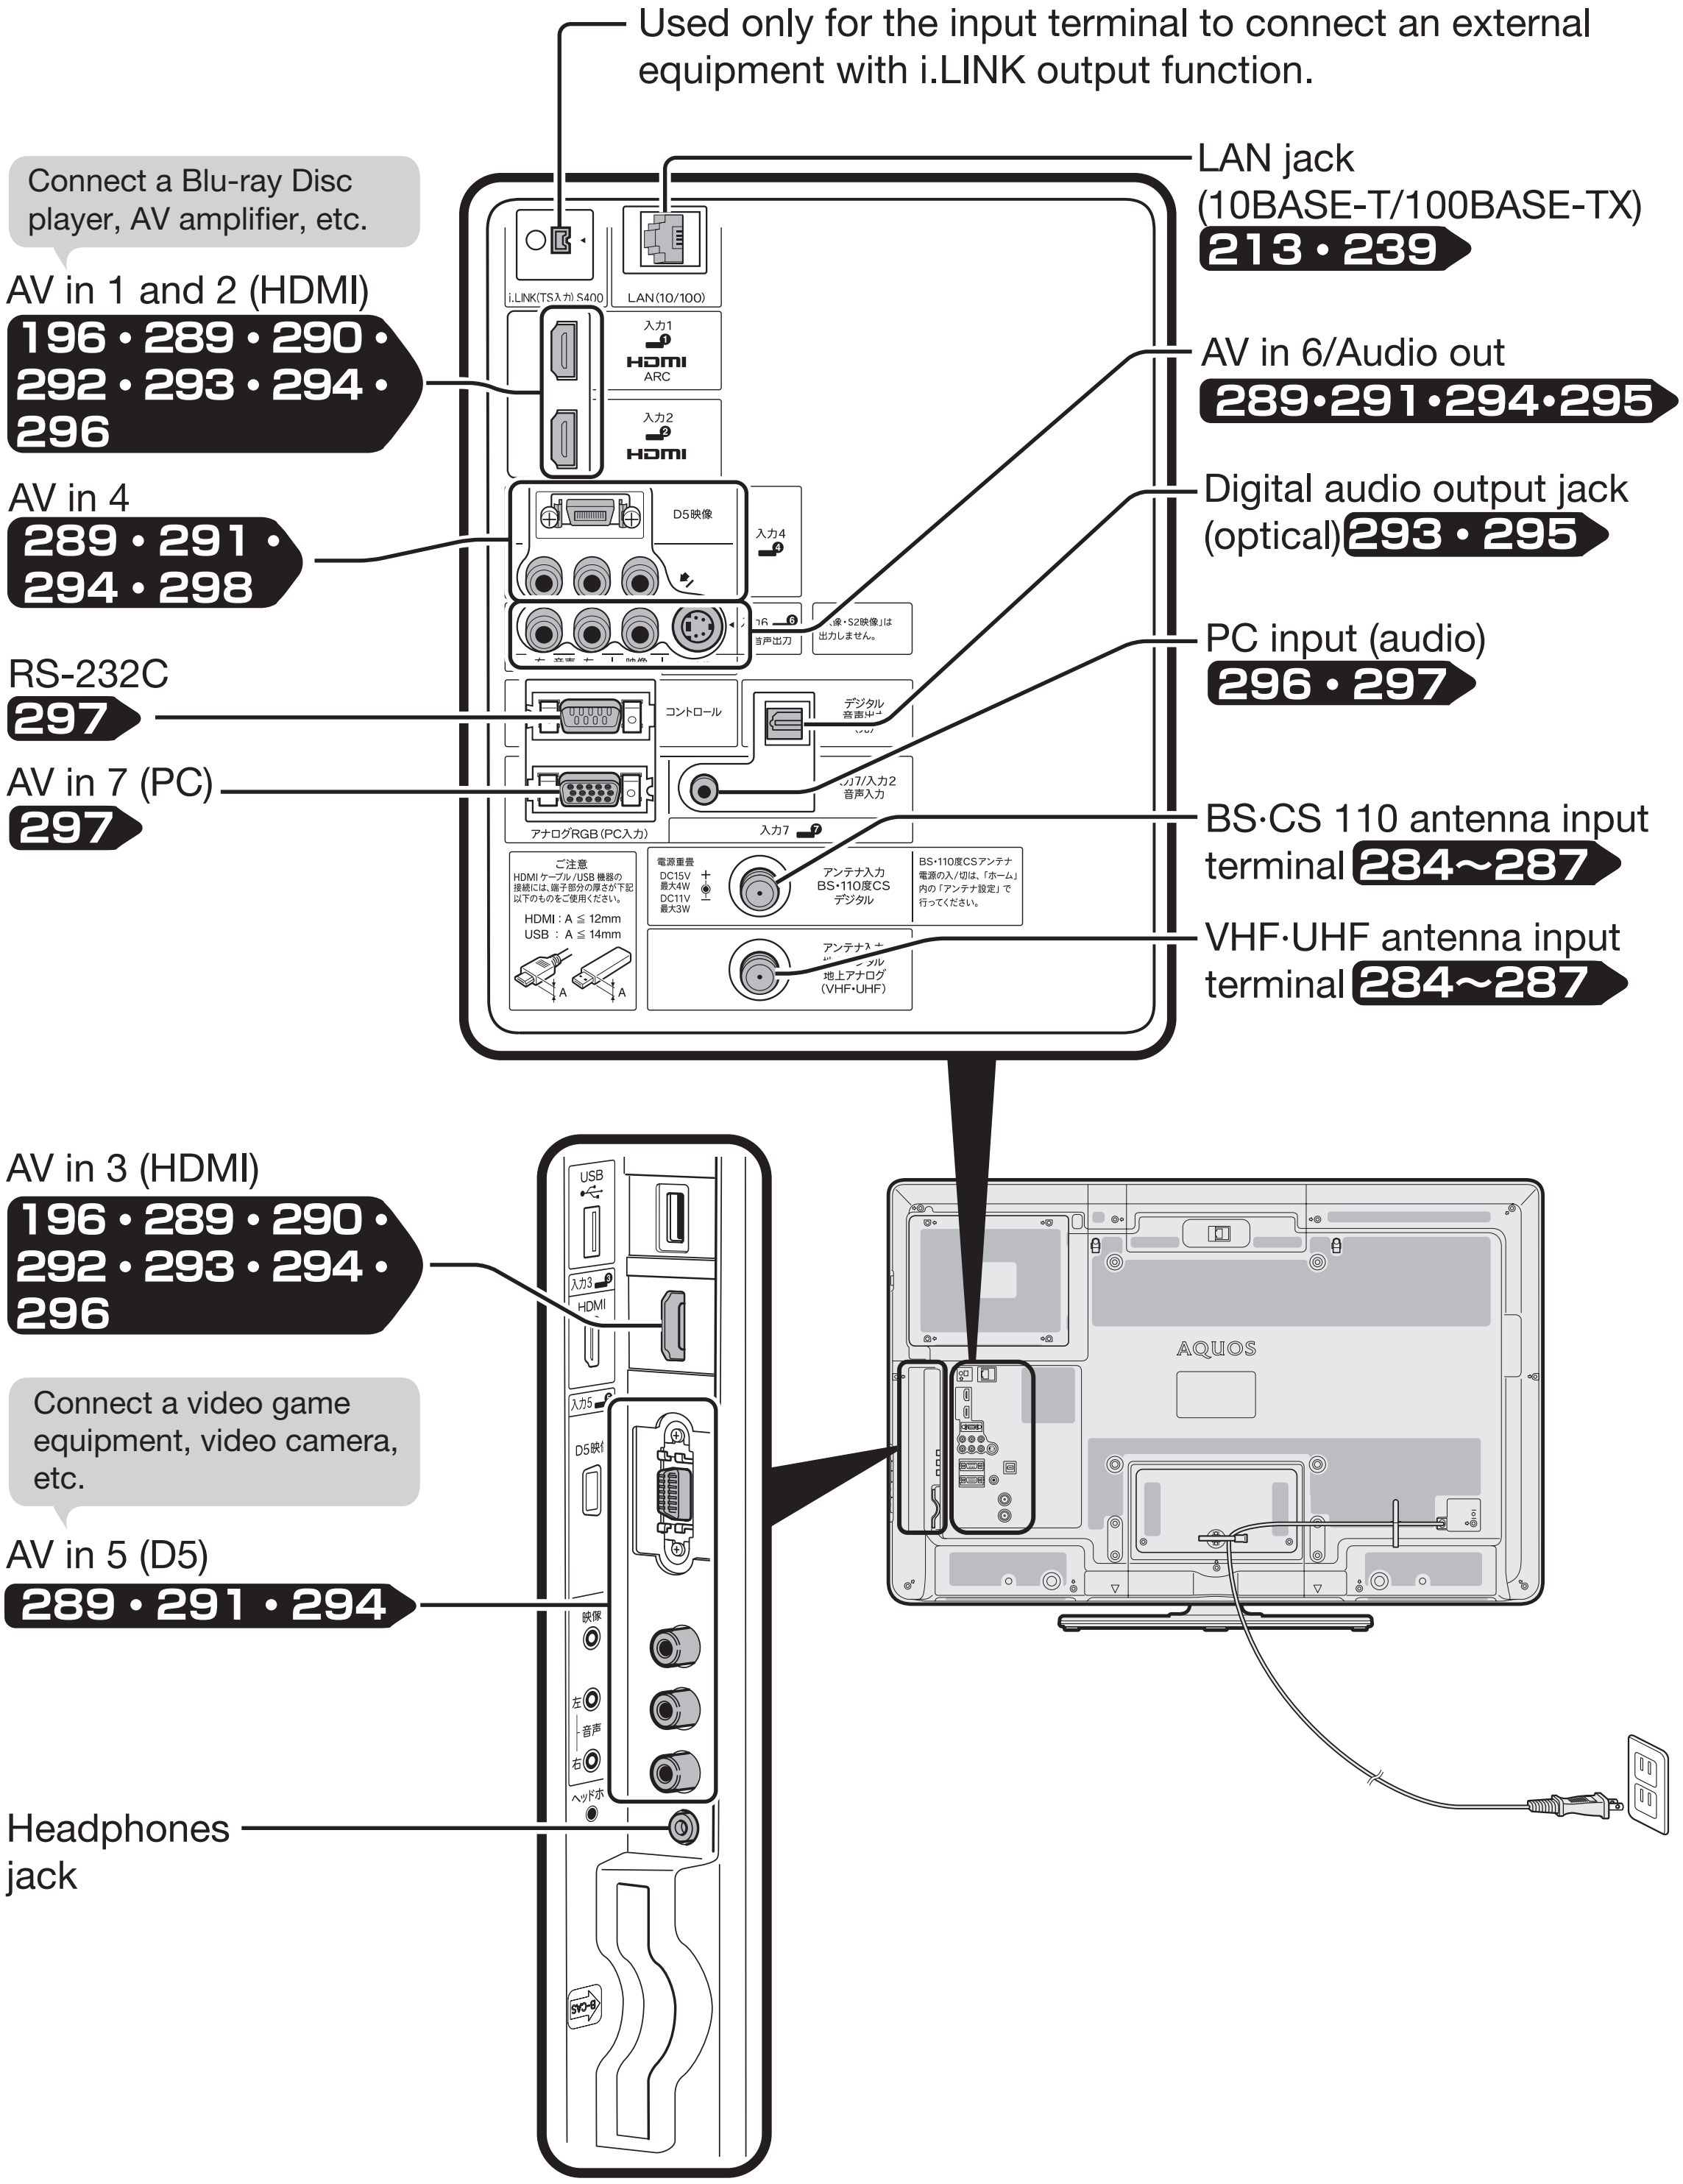
Used only for the input terminal to connect an external equipment with i.LINK output function.
Connect a Blu-ray Disc player, AV amplifier, etc.
AV in 1 and 2 (HDMI)
196 • 289 • 290 • 292 • 293 • 294 • 296
AV in 4
289 • 291 • 294 • 298
RS-232C
297
AV in 7 (PC)
297
LAN jack (10BASE-T/100BASE-TX)
213 • 239
AV in 6/Audio out
289•291•294•295
Digital audio output jack (optical) 293 • 295
PC input (audio)
296 • 297
BS·CS 110 antenna input terminal 284~287
VHF·UHF antenna input terminal 284~287
AV in 3 (HDMI)
196 • 289 • 290 • 292 • 293 • 294 • 296
Connect a video game equipment, video camera, etc.
AV in 5 (D5)
289 • 291 • 294
Headphones jack
AQUOS

Remote Control Unit

Active/Standby 35
Press to engage the TV set in the active or standby mode.

Channel select 44 • 244
- Press to select a channel.
- Use to input a number for various settings.

View the Internet or IPTV
229 • 244 • 248 • 252

Linked data broadcast
47 • 152 • 245

Mute 44
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (–) 44
Press to adjust the volume.

EPG 57 • 122 • 189
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.
Select a future program in EPG to set a timer program.


Finish
Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

List the programs recorded on BD/HDD 135

Display the Top Menu of the disc 141

BD/HDD select
114 • 135 • 139 • 160 • 167 • 172 • 174

Play back programs recorded on a disc 134 • 161 • 162
Fast forward, rewind, etc. during playback 148

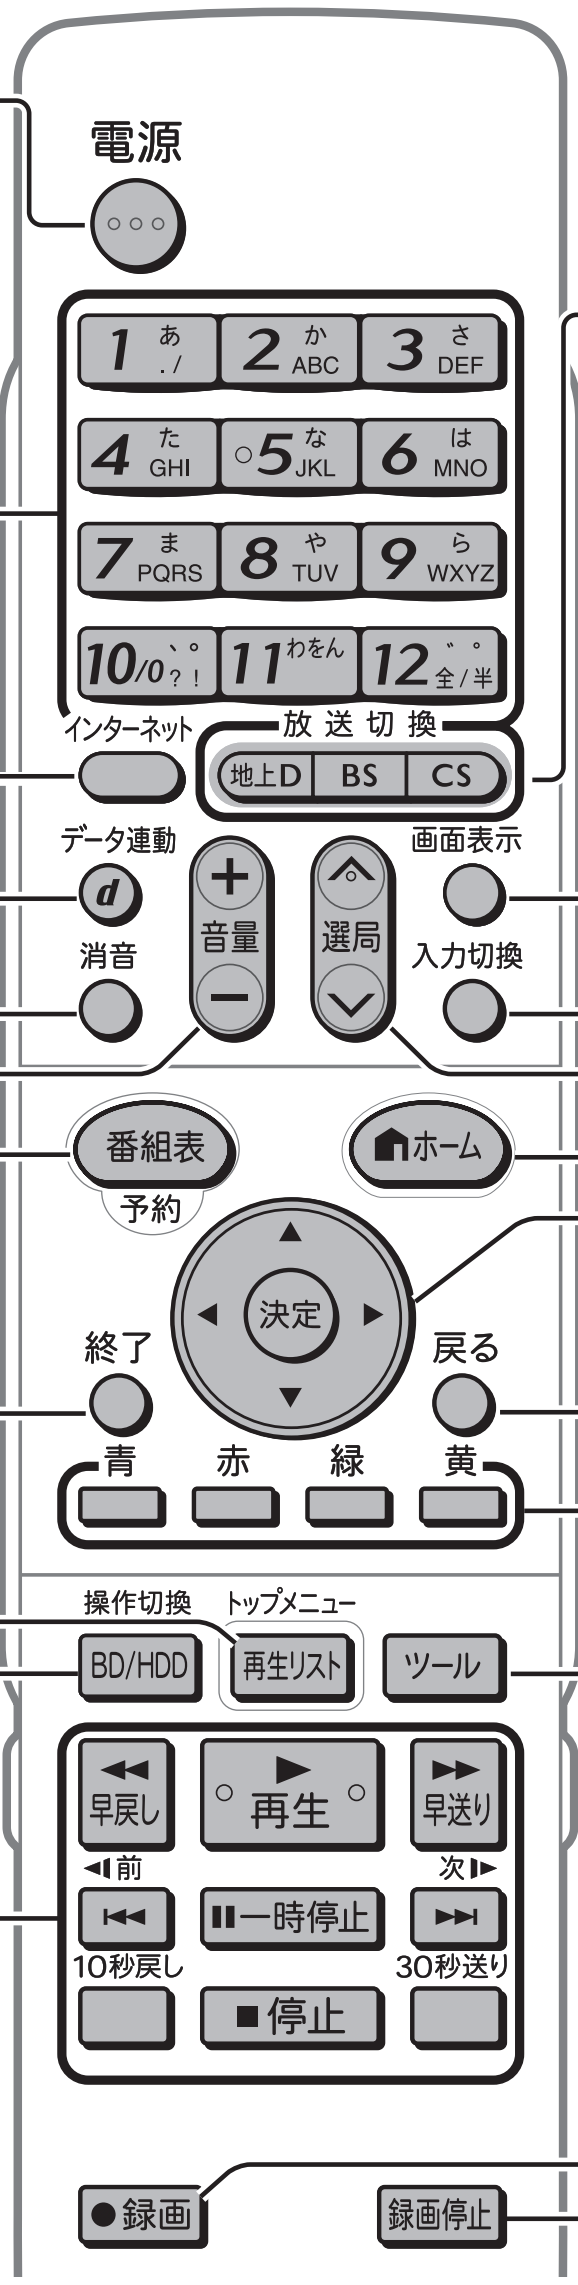

See Page **44** for how to select a program.

Terrestrial Digital/BS/CS 44
Select the CS digital channel for the first time. 306

Display 48 • 49
Press to display or turn off the channel call, etc.

Input select 121•172•198

Channel up (∧)/down (∨) 44
Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the “Home” Menu
38 • 39
Press to start some useful operations of the TV.

Cursor (up, down, left, right)
38 • 39
Enter/Confirm 38 • 39

Return 38

Color 58 • 59
Use to operate EPGs and data program screens.

Display the Tool Menu 42

REC 118~121

REC STOP 118~121

Buttons under the cover

Hold the cover by the projections ( ) and lift.

AV mode select 83

Audio select 67•68•152

Picture select 68•153

Caption 68•153


Terrestrial analog 44

Freeze 52

View status of the BD/HDD 114

Display the Pop-up Menu (BD) or Disc Menu (DVD) 141

Display the Playback Menu
154 • 155

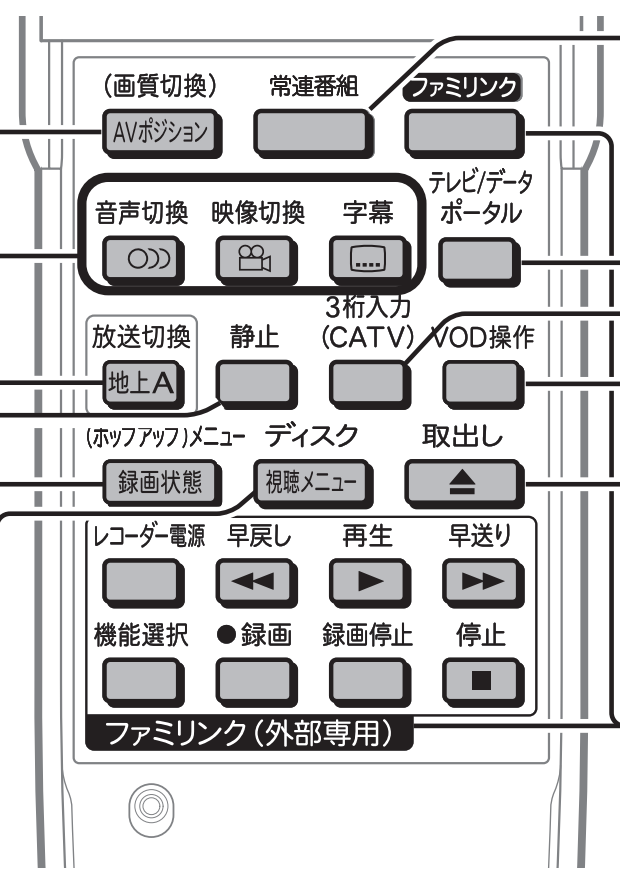

Recommended programs select 64~66
Press to select a program which the TV set recommends.

Media select 44 • 47

CATV 46
Digital channel number input 46


Display the operation panel of VOD 249•253•265

Eject the disc 37

Familink
184•186•187• 191 ~ 194•196
Press to operate “Familink” Recorders and AQUOS Audio connected via HDMI cables.

Switching the Display Language to English
ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.
  ホームメニューなどの画面表示を英語にすることができます。

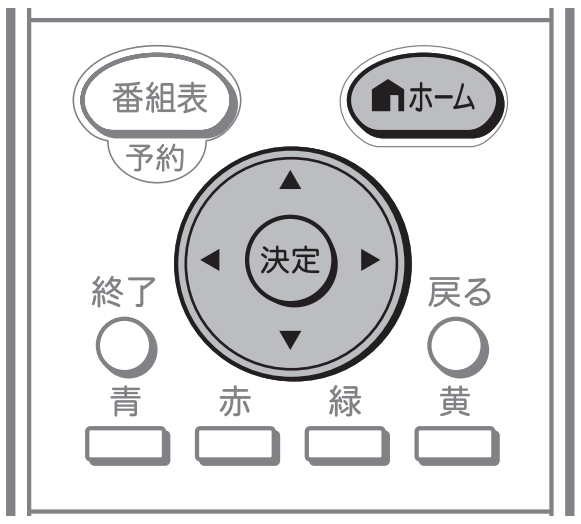

◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「（View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。


1
Press ホーム and select with 決定

Select “設定” (Setup) on the Home menu.
ホームメニューから「設定」を選ぶ




2
Select with 決定

Select “（視聴準備)” (View Setting).
「（視聴準備)」を選ぶ

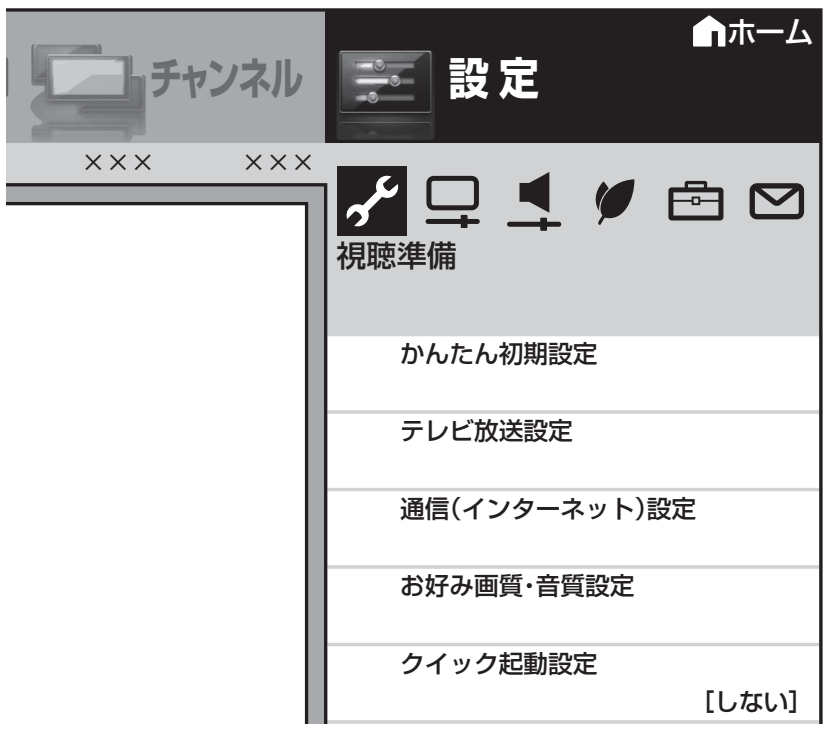

3
Select with 決定 and press 決定


Select “Language(言語)”.
「Language(言語)」を選ぶ

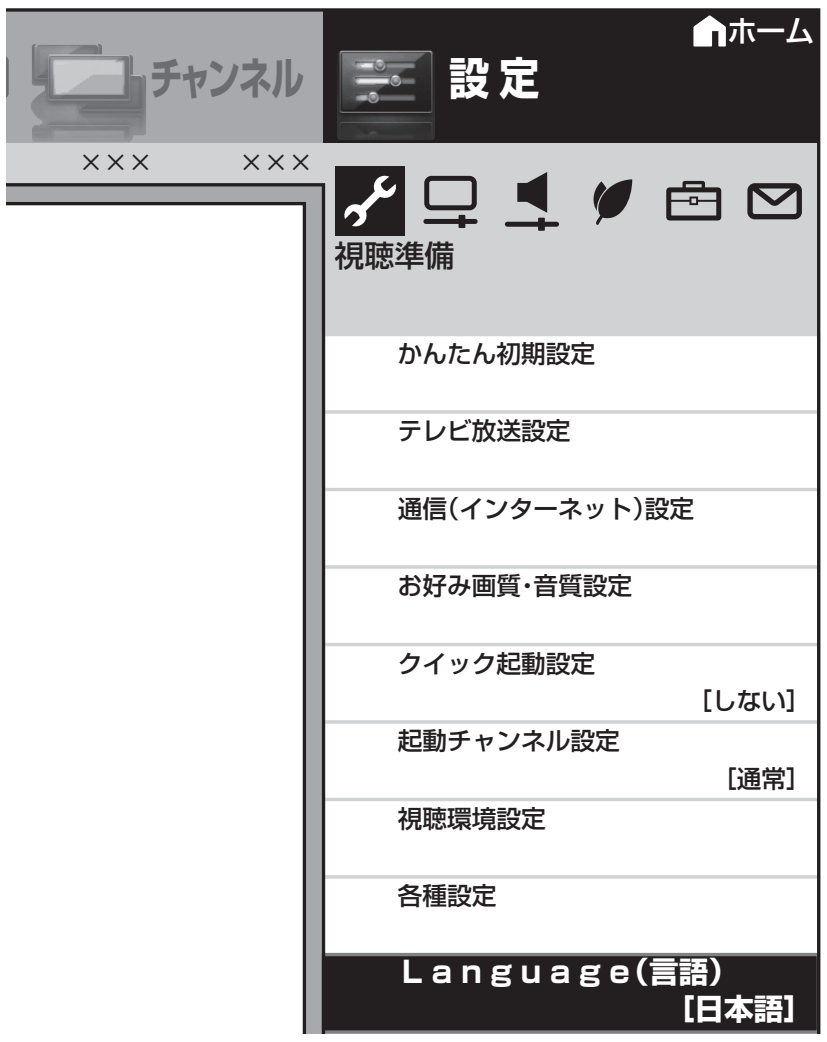

4
Select with 決定 and press 決定

Select “English”.
「English」を選ぶ

Enter.
決定する

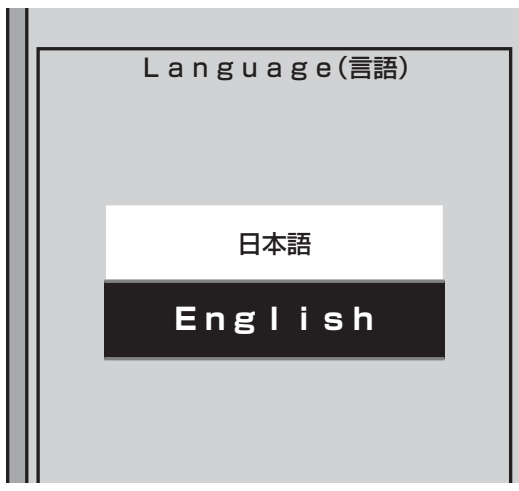

- The menu screen is now displayed in English.
- 画面表示が英語になります

5
Press ホーム

Finish this operation.
終了する